

1 Package Contents 包裝內容


Kindly ensure the product's contents upon unpacking; please refer to this quick start guide regarding the product 's specifications and important notices.
the items described below are the standard packaging.

打開包裝確認產品包裝內容，並請詳細閱讀此手冊，認識產品規格特性與注意事項。


產品包裝內容與數量依產品別而略有不同，實際內容以產品包裝物為準。



2 Physical Dimension 外觀尺寸

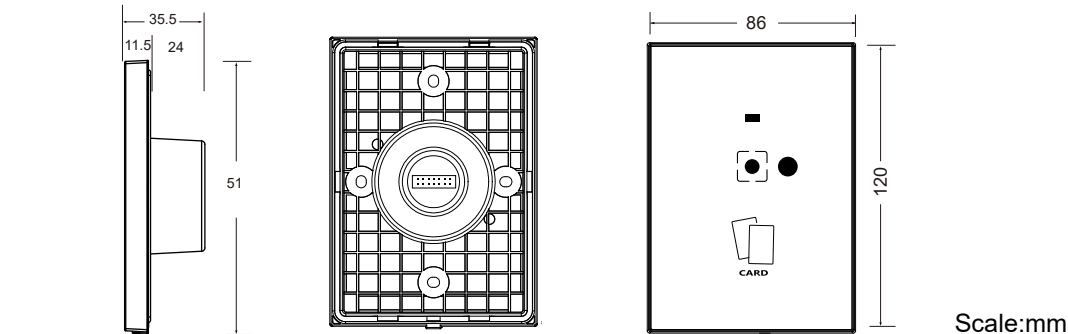

3 Installation 安裝

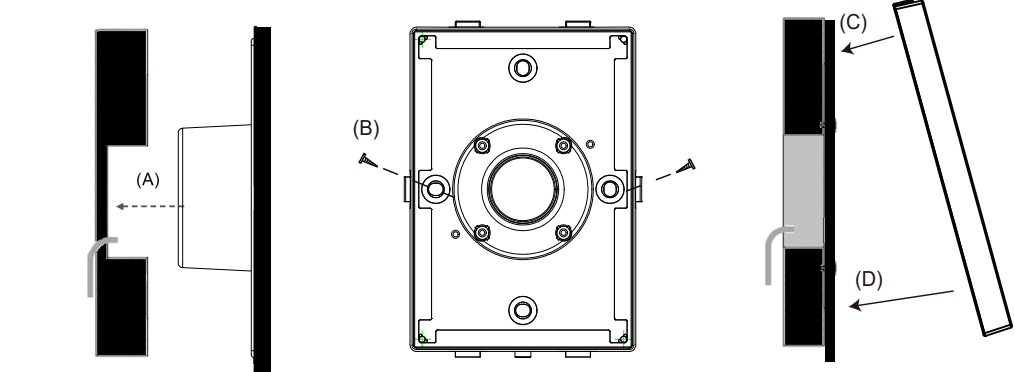

- (A). Connect the wires in accordance with the wiring instruction below.

(B). Mount the back plate onto the wall or electrical back box (86 type. European spec.).

(C). Make sure the concave area of back plate and the convex area of glass faceplate are aligned.


(D). Fit snugly the glass faceplate into the back plate.
- (A). 依照接線說明將線接上，並將各線端子插上。

(B). 將背板固定在牆上或歐規86預埋盒。

(C). 玻璃面板上方對準固定板卡榫。

(D). 將玻璃面板往背板方向密合。

4 Wiring Connections 接線

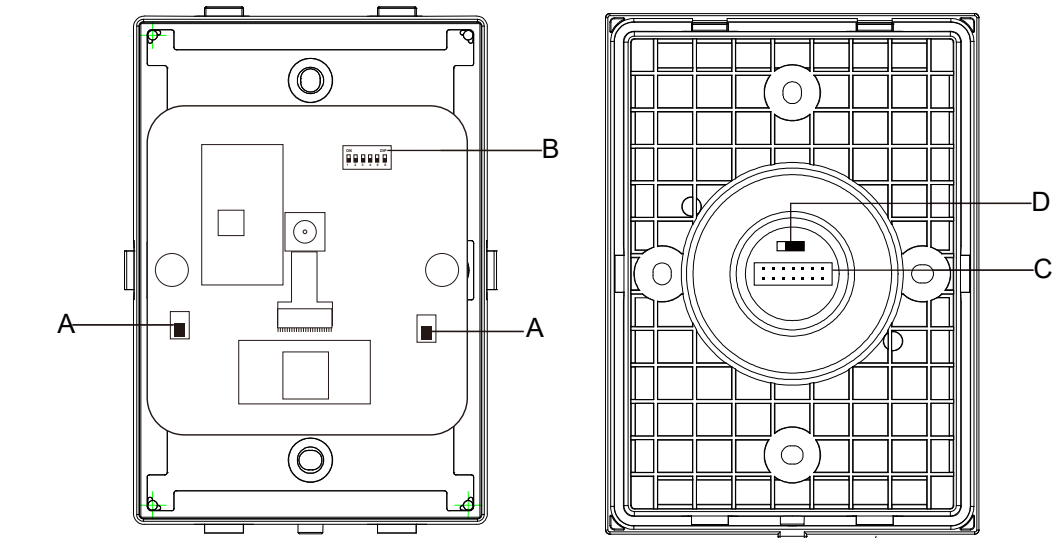

HUNDURE
HUNDURE TECHNOLOGY CO., LTD.

RS-485 L /QR CODE / NFC READER

PXR-QR SERIES

Quick Start Guide

快速安裝手冊

快速安裝手冊

Ver. 1.0

PXR-QRMNSL-QMA-20250710
630.00QR.0702.10000

www.hundure.com

A Case Sensor / 防拆除Sensor/ 防拆除Sensor

Kindly refer to the chart below for Node ID settings.

主机NODE ID, 请依照下表做配置


主機NODE ID, 請依照下表做配置

ON=1, OFF=0




ID	GCU RAC-2400	ID	NCU	ID	NCU
0	000000	34	010001	49	100011
1	100000	35	110001	50	010011
2	010000	36	001001	51	110011
3	110000	37	101001	52	001011
4	001000	38	011001	53	101011
5	101000	39	111001	54	011011
6	011000	40	000101	55	111011
7	111000	41	100101	56	000111
8	000100	42	010101	57	100111
9	100100	43	110101	58	010111
10	010100	44	001101	59	110111
11	110100	45	101101	60	001111
12	001100	46	011101	61	101111
13	101100	47	111101	62	011111
14	011100	48	000011	63	111111
15	111100				

•Without ACU-30/ACU-90 for digital output / 无外接ACU-30/ACU-90/ 無外接ACU-30/ACU-90

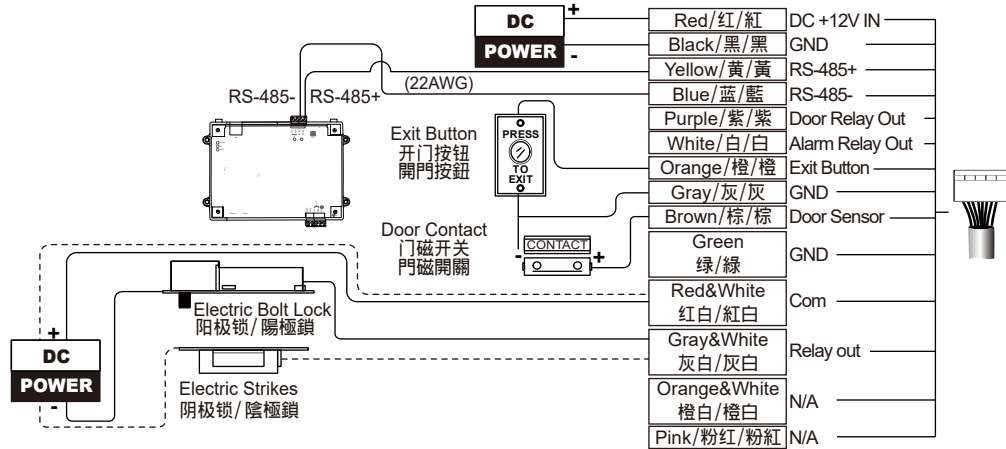

When lock controlled by built-in relay, kindly follow lock's character to adjust JP1. / 使用内建Relay控制电锁, 要依照电锁特性调整JP1. / 使用内建Relay控制電鎖, 要依照電鎖特性調整JP1.

•With ACU-30/ACU-90 for digital output / 外接ACU-30/ACU-90/ 外接ACU-30/ACU-90

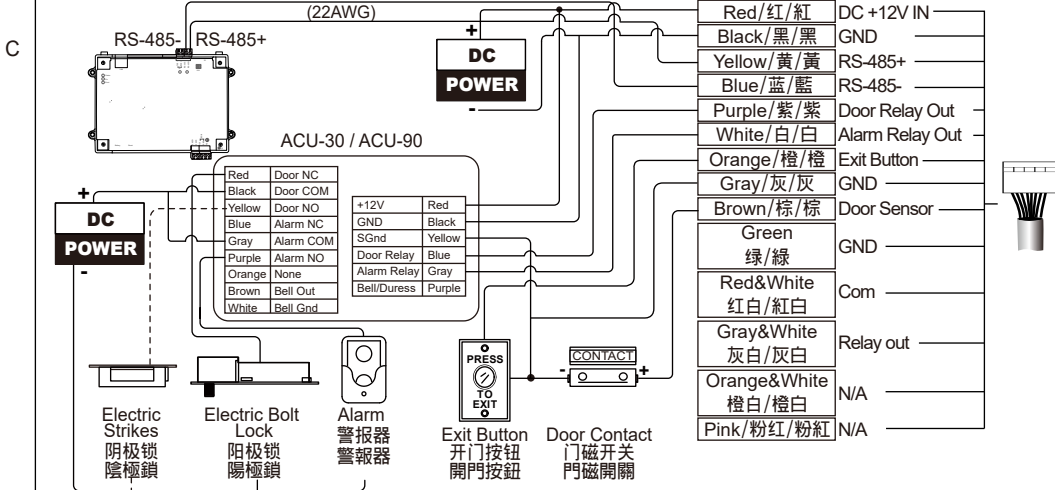

- When combined with NCU, kindly use ACU-90 for digital output. Other multi door control panels are using ACU-30. When Electric Bolt Lock is used, kindly connect the wire to COM and NC contacts.
- When Electric Strikes is used, kindly connect the wire to COM and NO contacts.
- Note:1. The maximum voltage and contact rating of the relay is DC 12V/2A or DC 24V/1A. If you connect a terminal with alternating current, make sure to transfer a relay with higher power output.
- 2. To enhance security, kindly install the reader and the ACU-30/90 separately in different locations.
- 若做为NCU之读卡机时, 请搭配ACU-90使用, 其它主机则使用ACU-30。
- 使用断电开门电锁, 如阳极电锁, 请接COM点及NC点。使用通电开门电锁, 如阴极电锁, 请接COM点及NO点。注意: 1. RELAY最大承载电力请勿超过 DC 12V/2A或DC 24V/1A, 如控制点设备为交流电源, 请另行转换大功率电驿(继电器)。
- 2. 为提高门禁的安全性, 安装读卡机时须与ACU-30/90分开安装在不同的位置。
- 若做为NCU之读卡機時, 請搭配ACU-90使用, 其它主機則使用ACU-30。
- 使用斷電開門電鎖, 如陽極電鎖, 請接COM點及NC點。使用通電開門電鎖, 如陰極電鎖, 請接COM點及NO點。注意: 1. RELAY最大承載電力請勿超過 DC 12V/2A或DC 24V/1A, 如控制點設備為交流電源, 請另行轉換大功率電驛(繼電器)。
- 2. 為提高門禁的安全性, 安裝讀卡機時須與ACU-30/90分開安裝在不同的位置。

JP1 Built-In relay 内建Relay 内建Relay

When Electric Bolt Lock is used, kindly connect the wire to COM and NC contacts. When Electric Strikes is used, kindly connect the wire to COM and NO contacts.

NO模式-RELAY常态开路模式, 如果被控制点为通电运行的装置, 请选择此一模式。
NC模式-RELAY常态导通模式, 如果被控制点为断电运行的装置, 请选择此一模式。
NO模式-RELAY常态开路模式, 如果被控制點為通電運行的裝置, 請選擇此一模式。
NC模式-RELAY常态導通模式, 如果被控制點為斷電運行的裝置, 請選擇此一模式。

Note:

1. Kindly use minimum 22AWG double-shielded aluminum mylar foil twisted pair cable for the connection between the reader and the controller.
2. In order to reduce long distance noise, The isolated net of transmission cable should connect to both ends of device ground.
3. The distance between two readers should be over 30cm to prevent radio frequency interference from each other. Mounting the device around metal could affect read range. Metal of any type around the device should be avoided while mounting.

- 备注:
1. 读卡机与控制器之间请使用22AWG以上的双隔离网铝箔麦拉对绞传输线。
 2. 为了减低远距离杂讯, 传输线的隔离网地应接两端装置的地。
 3. 建议两个读卡机之间的距离最少30公分以上, 避免安装在金属物周边, 以免影响感应距离。
- 備註:
1. 讀卡機與控制器之間請使用22AWG以上的雙隔離網鋁箔麥拉對絞傳輸線。
 2. 為了減低遠距離雜訊, 傳輸線的隔離網地應接兩端裝置的地。
 3. 建議兩個讀卡機之間的距離最少30公分以上, 避免安裝在金屬物週邊, 以免影響感應距離。

One Year Limited Warranty / 产品保固证明书 / 產品保固證明書

We warrants this product against defect in material or workmanship for 1 year from the date of purchase. If such a defect is discovered within this warranty limitation, contact your direct vendor for repair or replacement of your unit.
When returning the product, you must ship the product in its original packaging or packaging that gives an equal degree of protection. This warranty becomes invalid if the factory-supplied serial number has been removed or altered on the product.
This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence or modification of any part of the product. This warranty does not cover damage due to improper operation or maintenance, connection to improper equipment, or attempted repair by anyone other than We.
In no event shall We liability exceed the price paid for the product from direct, indirect, special, incidental, or consequential, damages resulting from the use of the product the product, its accompanying software, or it's documentation. We makes no warranty or representation expressed, implied, or statutory, with respect to its products, contents of use of this documentation and all accompanying software, and specially disclaims its quality, performance, merchantability or fitness for any particular purpose. We reserves the right to revise or update its product, software or documentation without obligation to notify any individual or entity.

我們保固此產品於購買日起一年之內因為材料上或是生產製造中所產生的缺陷, 所造成的外觀上, 或是功能上的缺陷及故障問題。若您在此保固期限之內發現此類問題, 請聯絡本公司的服務人員, 退回此產品, 我們將替您免費維修或是更換產品。
當您退回此產品時, 請依照原始的包裝方式包裝此產品, 或是給予同等級的包裝保護: 若是我們收到此產品時, 產品上沒有出厂時的序號標籤, 或是產品已經拆開或與出厂時有任何不同, 這個保固將變得無效。
此保固不包含天然的, 以及人為的破壞或改變、或是意外事故、不正常操作、誤用、濫用等外在因素所造成的損壞。
此保固不包含不當的操作或保養, 不當的連結至其他設備, 或是由本公司以外的人員企圖修復此產品。
起因於使用這種產品, 在間接、特別、次要因素, 或者隨之發生, 造成伴隨著軟件或其它文檔的損害, 本公司的責任在任何情況下都不得超過這產品的售價。
關於產品的軟件和文檔編制的全部內容, 本公司並沒有表示保證或法定它的性能、暢銷性、或者適用於任何特別的目的。
本公司保留權利修正或者不斷改進它的產品, 軟件或者文檔編製無義務通知任何個人或者購買者。

我們保固此產品於購買日起一年之內因為材料上或是生產製造中所產生的缺陷, 所造成的外觀上, 或是功能上的缺陷及故障問題。若您在此保固期限之內發現此類問題, 請聯絡本公司的服務人員, 退回此產品, 我們將替您免費維修或是更換產品。
當您退回此產品時, 請依照原始的包裝方式包裝此產品, 或是給予同等級的包裝保護: 若是我們收到此產品時, 產品上沒有出廠時的序號標籤, 或是產品已經拆開或與出廠時有任何不同, 這個保固將變得無效。
此保固不包含天然的, 以及人為的破壞或改變、或是意外事故、不正常操作、誤用、濫用等外在因素所造成的損壞。
此保固不包含不當的操作或保養, 不當的連結至其他設備, 或是由本公司以外的人員企圖修復此產品。
起因於使用這種產品, 在間接、特別、次要因素, 或者隨之發生, 造成伴隨著軟件或其它文檔的損害, 本公司的責任在任何情況下都不得超過這產品的售價。
關於產品的軟件和文檔編制的全部內容, 本公司並沒有表示保證或法定它的性能、暢銷性、或者適用於任何特別的目的。
本公司保留權利修正或者不斷改進它的產品, 軟件或者文檔編製無義務通知任何個人或者購買者。

Model / 型号 / 型號	Serial no. / 序号 / 序號	Date of Purchase / 购买日期 / 購買日期	Reseller stamp / 经销商 / 經銷商

Warranty will be valid only after filling out this form and stamped or signed by reseller!
此保固书必須填妥各項內容, 并且蓋有經銷商印鑑始為有效。
此保固書必須填妥各項內容, 並且蓋有經銷商印鑑始為有效。


www.hundure.com

5 Testing / 测试 / 測試

While installing or powering up the QR code reader, please note Not to touch the keypad until the fill-light comes on and then goes off. After that, the QR code reader can be operated normally.

QR code机种安装送电时及安装面板後,需注意勿碰触到面板,直到补光灯号亮起熄灭後,才可正常动作。

QR code機種安裝送電時及安裝面板後,需注意勿碰觸到面板,直到補光燈號亮起熄滅後,才可正常動作。

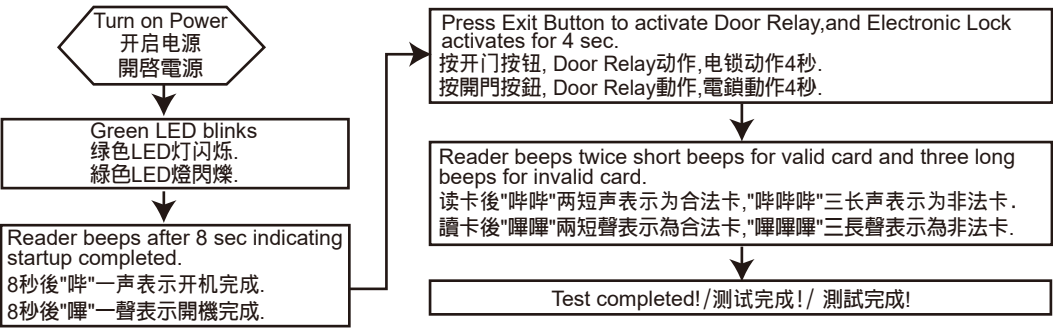

6 QR CODE

- Non-encryption mode / 无加密模式 / 無加密模式：
Please download QR Code generator from internet
请上网下载 QR code 产生器即可。目前仅支援数字卡号。
請上網下載 QR code 產生器即可。目前僅支援數字卡號。
- Encryption mode / 加密模式 / 加密模式：
Please go to 【PLAY Store】or 【App Store】，entering the"Hundure" in search box to get the App "mCard Access" or you can scanning QR code below, and install it.
请至【PLAY商店】或【App Store】，輸入"Hundure"搜尋，找到"mCard Access"或扫描下方二维码QR Code并安裝。
請至【PLAY商店】或【App Store】，輸入"Hundure"搜尋，找到"mCard Access"或扫描下方二维码QR Code並安裝。



After the installation, you can use the scanning function of APP to get a trial card number "1234567890" by scanning the QR code below.

安裝後可使用APP的扫描功能，扫描下方二维码QR Code取得试用版卡号"1234567890"

安裝後可使用APP的掃描功能，扫描下方二维码QR Code取得試用版卡號"1234567890"



Please refer to the operating instructions on the App before use.

使用方式请参阅APP上的操作说明。

使用方式請參閱APP上的操作說明。

7 NFC Setups / NFC步驟 / 步驟

Please scan the QR Code link.

After installation, you can use the scanning function of the APP to scan the QR Code provided by Hundure to authorize binding.

请扫描QR Code连结。

安裝後可使用APP的扫描功能，扫描汉军提供的QR Code授权绑定。

請掃描QR Code連結。

安裝後可使用APP的掃描功能，掃描漢軍提供的QR Code授權綁定。

